

Carpet Saver / Hardfloor Saver Applicator Instructions



Check Contents:
Frame w/roller x1
Handle x 1
Hollow bar x 1
End Caps x 2
Stands x 2
Nuts & Bolts x 4 each
Butterfly Nuts x 4



Attach Handle to Frame using 4 x butterfly nuts




Attach Stands to Frame using 4 x Nuts & Bolts
2 each side



Insert Hollow bar through selected film roll chosen



Insert end caps x 2 into Core of film roll exposing hollow bar

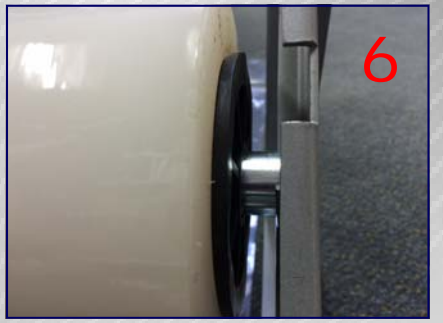

Insert completed film roll into slots



Pull out film to the front of applicator with the adhesive side facing Outwards.



Roll film under main roll as shown above.



Push applicator forward to desired length cut and repeat



If you required any further assistance please call one of our branches in Sydney or Melbourne

Sydney: 02 9755 0716

Melbourne: 03 9310 3892

